

OWNER'S MANUAL —
Please read before using this equipment.

Thank you for purchasing a RadioShack 2X/4X Desktop Magnifier. Your magnifier carries a 2x main lens and a 4x inset lens to let you view objects at two or four times their normal size. The built in light lets you see objects even in the dark. Its folding stand makes it compact for storage and freestanding for easy, handsfree magnifying.

⚠ WARNING ⚠

Dispose of old batteries promptly and properly. Do not burn or bury them.

 
⚡ CAUTION ⚡

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (stand, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the light for a week or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

INSTALLING BATTERIES

To power your magnifier, you need four AA batteries (not supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries. ⚡

1. Unfold the magnifier and place it on the desktop with the battery compartment facing up.
2. Slide the battery compartment cover in the direction of the arrow to remove it.

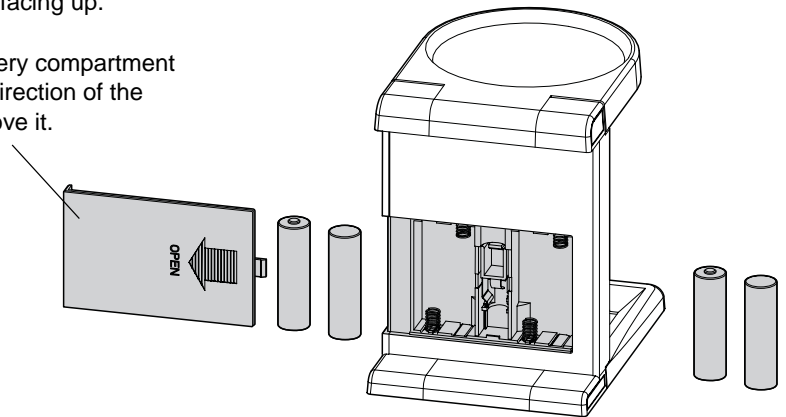


3. Place the AA batteries on top of the ribbons as indicated by the polarity symbols (+ and -) marked inside the compartment.
4. Replace the cover.

When the light dims, replace the batteries. ⚠ ⚡

USING THE MAGNIFIER

3. To use the large, 2x magnifying lens, place the magnifier over the objects you want to magnify and look through the lens.

 To use the small, 4x magnifying lens, hold the object you wish to magnify up close under the lens, until you can view the object clearly.

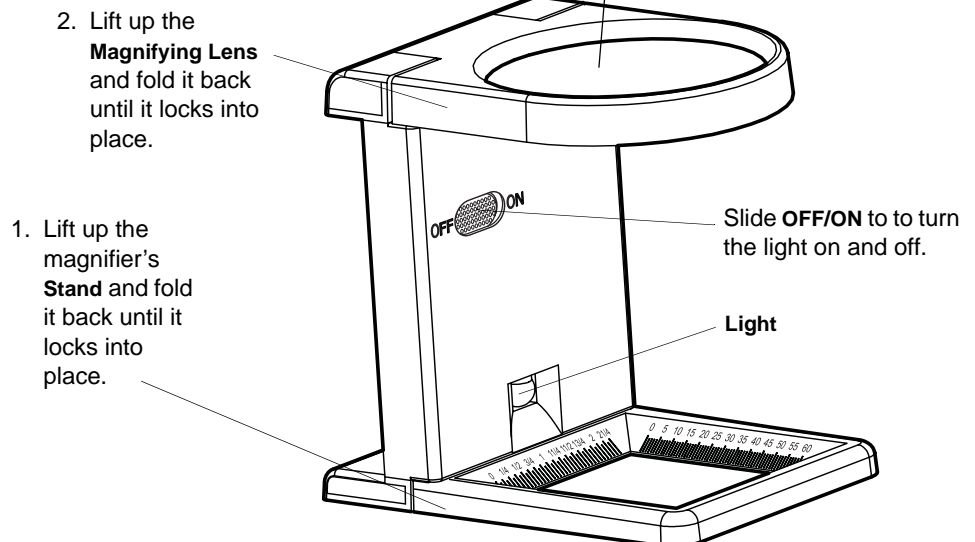

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

 
 
! — Important

⚡ — Caution

© 2002 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

REPLACING THE LIGHT BULB

1. Remove the battery compartment cover and the batteries.

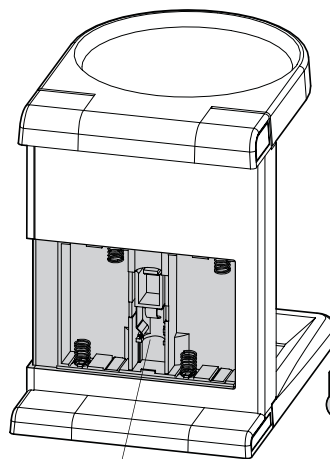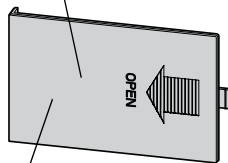

2. Press down on the **Bulb Compartment Cover's** tab, and then remove the cover.

3. Gently pry out the old bulb and replace it with a new **4.8V 360mA bulb**. ⚠

4. Replace the cover.

**Bulb
Compartment**

⚠ WARNING ⚠

Use only a 4.8V 360mA E-10 bulb of the required size. Using a bulb that does not meet the specifications might damage the magnifier.

CARE

Keep the magnifier dry; if it gets wet, wipe it dry immediately. Use and store the magnifier only in normal temperature environments. Handle the magnifier carefully; do not drop it. Keep the magnifier away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your magnifier is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the magnifier's internal components can cause a malfunction and might invalidate its warranty.

SPECIFICATIONS

Power Requirement Four AA Batteries

Dimensions (folded) $5\frac{9}{16} \times 4\frac{1}{16} \times 1\frac{3}{4}$ inches
(141 × 103 × 45 mm)

Weight (without batteries) 9.3 oz (263 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99